

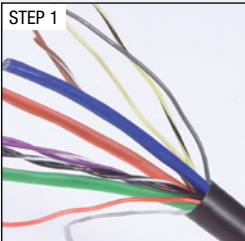


**Tip*****How to perform a field installation of a DGBH15FT HD15 (SVGA) jack***

Prepare bulk cable by exposing coax and conductor lines as shown.

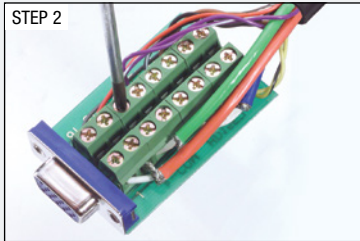

Insert coax center conductor and shield as well as conductors into appropriate terminal slot as indicated in the supplied wiring diagram. Tighten the setscrews.

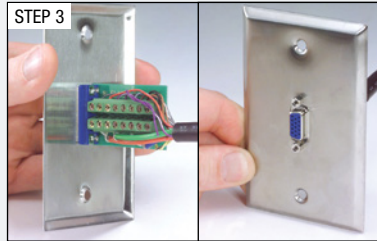

Attach the completed assembly to the mounting surface.