


Tip

Installation of Mini DIN bulkhead adapter styles



Front Mount

Mount adapter from the front of panel, secure threads/nut from the back of the panel.

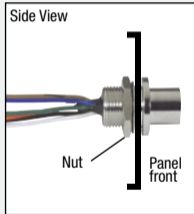

Rear Mount

Mount adapter from the rear of panel, secure threads/nut from the front of the panel.

