


Tip *TDT tool easily inserts and extracts crimp and poke type contacts*


FOR INSERTING CONTACTS

STEP 1

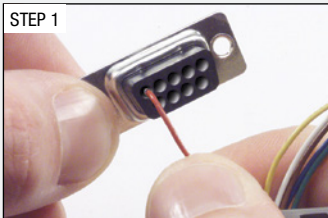


Insert a crimped contact pin into one of the holes of a D-Sub connector.

STEP 2

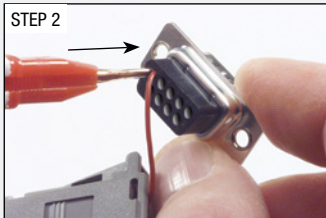

Using the red colored end of the TDT tool, push the contact pin until it stops.


STEP 3

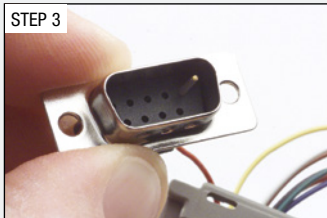

The contact pin is now seated securely in the connector.


FOR EXTRACTING CONTACTS

STEP 1

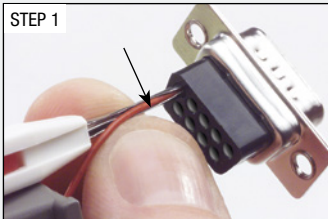


Bend and insert the wire into the track of the white end of the TDT tool.

STEP 2

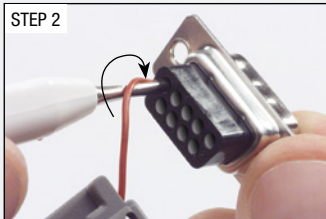

While pushing the TDT tool forward, make a slight twisting motion to grab the contact pin.

STEP 3

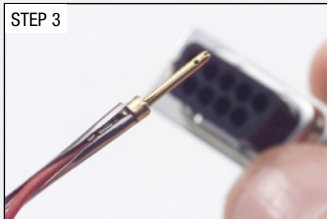

Pull the contact pin out from the connector.