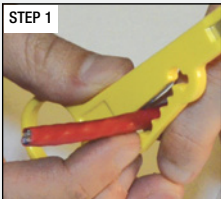


Tip

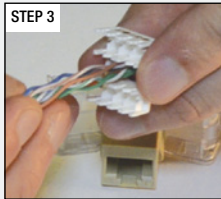
How To Terminate A Keystone Category 5e/6 Tool-Less Jack

STEP 1

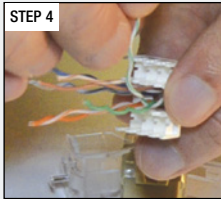
Strip cable jacket approximately one inch from the cut end. Separate the wires to expose the wire guide and snip off.

STEP 2

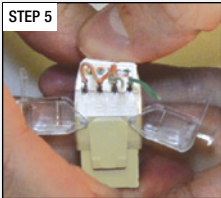
Separate the wire pairs. This will take a little time, but it will be necessary for the next two steps.

STEP 3

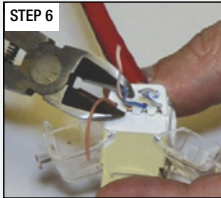
Push the wire pairs through the hole in the tool-less jack's wire guide.

STEP 4

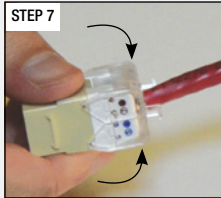
Using the wire guide's colored print, snap each wire into appropriate slot. Be sure each wire snaps in two places on the guide to ensure that conductors do not overlap or protrude.

STEP 5

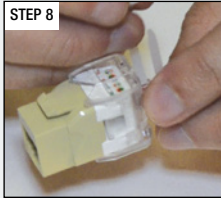
Place the jack face down on a strong, flat surface. Make sure gate is open on the back and place the wire guide onto the jack while matching up the colored print. Press down firmly until you feel the connectors catch.

STEP 6

Once the conductors are firmly terminated, snip any excess wires sticking out of the top and bottom of the jack to allow the gate to close securely and protect the wires from accidental contact.

STEP 7

Close the gate on the jack around the guide and cable.

STEP 8

If necessary you can wrap a zip tie around the circular section of the gate and tighten. Now snip the excess tie and you're done! This will close the gate permanently.