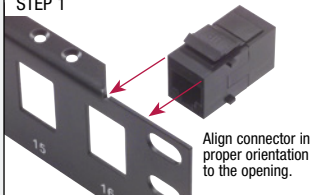# Tip | *Easily panel mount a keystone style connector*
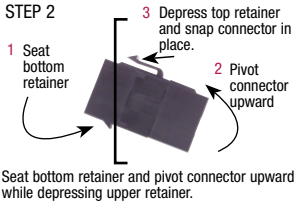
Keystone style refers to the snap-in mounting mechanism that many manufacturers have adopted.

STEP 1

Align connector in proper orientation to the opening.

STEP 2

3 Depress top retainer and snap connector in place.

1 Seat bottom retainer

2 Pivot connector upward

Seat bottom retainer and pivot connector upward while depressing upper retainer.

STEP 3

Connector fully seated.